


# NH DIMENSION Fuse Bases

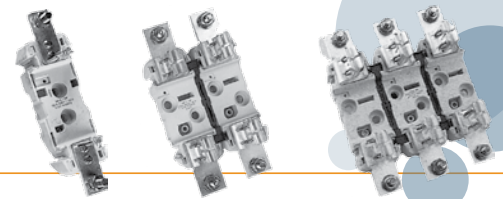

## Type 0-EP\* – Fuse Bases for NH-0 Fuses without striker

BB01EPR

BB12PP

BB23PP

Poles	Mounting Style					
	Discontinued Cat. No.	Screw New Reference No.	New Catalog No.	Discontinued Cat. No.	DIN-Rail New Reference No.	New Catalog No.
1	41202-G	B213142	BB01EP	42202-G	S216193	BB01EPR
2	41212-G	C214661	BB02EP	42212-G	P216696	BB02EPR
3	41214-G	G215171	BB03EP	42214-G	C217214	BB03EPR
4	41219-G	Q216191	BB04EP	42219-G	J217726	BB04EPR

\* EP bases have square contacts. PP bases have pincer contacts.

## Type 0-PP – Fuse Bases for NH-0 Fuses w/o striker

Poles	Discontinued Cat. No.	New Reference No.	New Catalog No.	Discontinued Cat. No.	New Reference No.	New Catalog No.
1	41302-G	N216695	BB01PP	42302-G	T218241	BB01PPR
2	41312-G	B217213	BB02PP	42312-G	G218759	BB02PPR
3	41314-G	G217724	BB03PP	42314-G	W219278	BB03PPR
4	41319-G	R218239	BB04PP	42319-G	H222486	BB04PPR

## Type 1-PP – Fuse Bases for NH-1 Fuses w/o striker

Poles	Discontinued Cat. No.	New Reference No.	New Catalog No.	Discontinued Cat. No.	New Reference No.	New Catalog No.
1	41402-G	E218757	BB11PP	42402-G	A223008	BB11PPR
2	41412-G	F222484	BB12PP	42412-G	G200796	BB12PPR
3	41414-G	Y223006	BB13PP	42414-G	Y201340	BB13PPR
4	41419-G	X201339	BB14PP	42419-G	H201855	BB14PPR

## Type 2-PP – Fuse Bases for NH-2 Fuses w/o striker

Poles	Discontinued Cat. No.	New Reference No.	New Catalog No.	Discontinued Cat. No.	New Reference No.	New Catalog No.
1	41502-G	F201853	BB21PP	42502-G	E211075	BB21PPR
2	41512-G	S211593	BB22PP	42512-G	V211595	BB22PPR
3	41514-G	B212107	BB23PP	42514-G	D212109	BB23PPR
4	41519-G	C213143	BB24PP	42519-G	R212627	BB24PPR

## Type 3-PP – Fuse Bases for NH-3 Fuses w/o striker

Poles	Discontinued Cat. No.	New Reference No.	New Catalog No.	Discontinued Cat. No.	New Reference No.	New Catalog No.
1	41602-G	W213643	BB31PP	42602-G	X213644	BB31PPR
2	41612-G	D214662	BB32PP	42612-G	B214154	BB32PPR
3	41614-G	H215172	BB33PP	42614-G	F214664	BB33PPR
4	41619-G	L215681	BB34PP	42619-G	K215174	BB34PPR

## Dimensions of Polyester Fuse Bases for NH Fuses

	0-EP	0-PP	1-PP	2-PP	3-PP
A	46	46	60	60	60
B	20	25	32	35	40
C	168	168	209	225	241
D	150.5	150.5	176	201	210
E	7.5	7.5	10.5	10.5	10.5
F	-	-	30	30	30
G	14.5	14.5	20.5	20.5	20.5
H	25	25	25	25	25
I	185	185	250	250	270
J	29	29	35	35	35
K	M8	M8	M10	M10	M12
L	74	75	81	81	81
M	59	61	71	89	103
N	95	95	122.5	122.5	142.5
O	122	122	146	146	146
P	48.5	48.5	65.5	65.5	81.5
Q	94	94	125.5	125.5	141.5
R	142	142	191	191	223
S	190	190	256.5	256.5	304.5

